



# **Instruction Manual**

 
## **1C10A**




# POWERBANK

## MOBILE CHARGER

### Instruction Manual



PowerBank

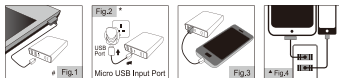Micro USB Charging Cable  
(Input/Output)

- \* USB power adaptor is not included in packaging.  
 \* Output 1: for iPhone / Android phones / iPad  
 Output 2: for iPhone / Android phones / Galaxy Tab

#### Supports:



#### Specifications

Input	5V DC 2A
Output	Output 1 : 5V DC 2.4A Output 2 : 5V DC 1A (Total 3.4A for 2 outputs)
Dimension	72(L) x 22(W) x 102(H) mm
Weight (Power Pack only)	230g
Operating Temperature	0°C ~ 40°C
Battery Type	Li-ion battery 3.6V 10400mAh
Recharging Time	8 hours(approx.)*

\* The above recharging time may vary under different operating conditions. Longer charging time might be needed in the first charge.

#### LED indication

During recharging, the LED displayed on the front side of the PowerBank will light up.

#### Checking the battery status:

(Table 1)

Battery Strength	LED Indicator	Remarks
Good	Four LED on	No need for recharging
Good to average	Three LED on	-
Average	Two LED on	-
Weak	One LED on	-
No power	LED off	Need to be recharged immediately

### GB

#### Product Features

- High capacity PowerBank with built-in 10400mAh lithium-ion battery, perfect for smartphones and tablet PCs.
- Convenient to recharge via USB power port from computer in use\* or by USB power adaptor\*
- 2A speedy recharging
- Fast charging with 2.1A
- Total 3.4A dual USB outputs for simultaneous charging of two devices
- Safety protection
  - Over / under temperature protection
  - Over charging / discharging protection
  - Overload protection
  - Short circuit protection
  - Protect by auto cut-off when the same cable is plugged into input / output ports simultaneously
- LED indicator to show battery level

**Read the instruction manual thoroughly before use.  
Keep the manual for future reference.**

#### Operating Instructions:

##### Recharging the PowerBank

1. Plug the micro USB port of the provided USB charging cable into the input port of the PowerBank, Connect the other end of the cable to a computer\* (Fig. 1) in use or USB power adaptor\* (1A or up) (Fig.2) to AC power outlet, it is recommended to use the USB cable provided by GP for recharging.
2. The LED indicator will be on to show the charging status.
3. All LED will be on once recharging is completed.
4. Disconnect the USB cable after recharging.

##### Charging Other Electronic Devices

1. Plug the provided USB charging cable into the USB output port of the fully recharged PowerBank, Connect the other end of the cable to the electronic device. Using the original USB cable provided by the electronic device is also accepted.(Fig. 3)
2. Dual USB output for simultaneous charging of two devices.(Fig. 4)\*
3. Charging starts in 3 seconds otherwise unplug and reconnect.
4. Refer to the electronic device to check the charging status if necessary.
5. Unplug after charging and the PowerBank will turn off automatically.
6. Press the front button to check the battery level shown by the LED indicator.(Table 1)

#### Caution

1. Press the PowerBank power to reveal the remaining power level before use if it has been idle for a long time.
2. The red LED light will flash when the PowerBank is in abnormal condition. In this case, unplug the charging cable for at least 1 minute, then press the PowerBank power button once and place it at room temperature to resume normal.
3. It is normal that the PowerBank gets warm during discharging and recharging and it will gradually cool down to room temperature after fully discharging and recharging.
4. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person.
5. Keep the PowerBank away from heat sources, direct sunlight, combustible gas, humidity, water and other liquids.
6. Do not disassemble, microwave, incinerate, paint or insert foreign objects into the PowerBank.
7. Do not initiate the PowerBank to mechanical shock such as crushing, bending, puncturing or shredding, Avoid dropping or placing heavy object on top of the PowerBank.
8. Do not short-circuit the PowerBank or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
9. Do not operate the wet or otherwise damaged PowerBank to prevent from electric shock, explosion and possible injury.
10. Only recharge the PowerBank via USB cable. Recharging PowerBank by AC adapters or wall sockets without using USB cable may cause damage to the PowerBank.
11. GP does not accept any warranty or return for any damage to the battery or the internal components in conditions of Caution points 5, 6, 7, 8, 9 and 10.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.




Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and the


GP

POWERBANK  
MOBILE CHARGER


## 使用說明書

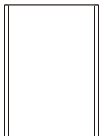

隨身充電器

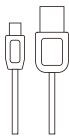

微型USB充電線(輸入/輸出)

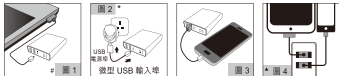

\* USB 轉接器不包括在內

\* 輸出端口1: 供iPhone / Android phones / iPad使用

輸出端口2: 供iPhone / Android phones / Galaxy Tab使用

## 適用於:



## 產品規格:

輸入	5V DC 2A
輸出	輸出 1: 5V DC 2.4A 輸出 2: 5V DC 1A (總輸出量 3.4A)
尺寸	72(長) x 22(闊) x 102(高) 毫米
重量 (只限充電器)	230克
操作溫度	0°C - 40°C
電池種類	3.6V 10400mAh 鋰離子電池
充電時間	約8小時*

\* 上述充電時間或因不同的操作方式而異。首次充電可能需較長。

## LED 顯示燈

在充電期間，隨身充電器正面的LED顯示燈將會亮起。

## 檢查電池狀態:

(表1)

電池量	LED 顯示燈	備註
良好	4盞LED 亮起	毋需充電
良好至普通	3盞LED 亮起	-
普通	2盞LED 亮起	-
弱	1盞LED 亮起	-
電力耗盡	LED 燈熄滅	需要立即充電

## 中文

## 產品特點

- 內置10400mAh鋰離子電池的高容量儲電器，是智能電話和平板電腦的最佳選擇
- 方便使用USB電源端口透過操作中的電腦#或USB充電\*
- 2A 極速充電
- 使用2.1A快速充電
- 雙重USB 輸出端口總共3.4A，可供兩個裝置同時充電
- 安全裝置
  - 高/低溫保護裝置
  - 充電過度/不足保護裝置
  - 過荷保護裝置
  - 短路保護裝置
- LED 顯示燈顯示電池量

使用前請先詳細閱讀使用說明書。  
保留使用說明書以供日後參考。

## 操作說明:

## 為隨身充電器充電

- 把提供的USB電線推進已完全充電的隨身充電器的USB輸出端口。把電線另一端接取至操作中的電腦# (圖1)或USB轉接器\* (1A或以上) (圖2)至AC 電源輸出端口。建議使用GP 提供的USB 電線充電。
- LED顯示燈將會亮起顯示充電狀態。
- 完成充電時，所有LED 顯示燈會亮起。
- 完成充電後拔除USB電線。

## 為其他電子裝置充電

- 把提供的USB電線推進已完全充電的隨身充電器的USB輸出端口。把電線的另一端接取至電子裝置。使用電子裝置提供的原裝USB電線也可。(圖3)
- 雙重USB 輸出端口可供兩個裝置同時充電。(圖4)\*
- 三秒後開始充電，否則毋需拔除及再次接取。
- 有需要時可查看電子裝置檢查充電情況。
- 完成充電後拔除，隨身充電器將會自動關閉。
- 按前端的按鈕檢查LED 顯示燈顯示的電池量。(表1)

## 注意事項

- 如PowerBank已開置了一段時間，使用前按一下按鈕以顯示剩餘電量。
- 如出現異常情況，拔除充電線至少一分鐘，然後按一下按鈕把PowerBank置於室溫待其回復正常。
- PowerBank充電或放電時變暖是正常現象，完成充電或放電後，PowerBank會逐漸降至室溫。
- 此裝置不適合兒童或體弱者使用，除非他們受到負責人充分監督。
- PowerBank應置於遠離熱源、直接陽光照射、可燃氣體、潮濕、水和其他液體的地方。
- 切勿折除、放入微波爐、焚燒、油漆或把異物插入PowerBank。
- 切勿令PowerBank受到機械震動，例如擊碎、彎曲、打孔或切碎。避免在PowerBank上面放置重物。
- 切勿令PowerBank短路，和切勿存放於可能被金屬或導電物體引致短路的容器內。
- 切勿使用被沾濕或損壞的PowerBank，以防觸電、爆炸和可能導致的受傷。
- 只可使用USB線為PowerBank充電。如使用其他AC轉接器或隨身插座充電，而非使用USB線充電，可能會導致PowerBank損壞。
- GP 不接受任何損壞的電池或根據注意事項第5、6、7、8、9和10點所述的內部組件保費和退貨。

此裝置符合FCC條例的第15部。操作應符合以下兩個條件: (1) 此裝置不會產生有害干擾，和 (2) 此裝置必須可應付任何干擾，包括可能導致意外操作的干擾。



請勿將電器當作未分類的城市垃圾，應使用分類收集設施。請聯絡當地政府了解有關回收系統的資訊。如果電器被棄置於堆填區或廢物收集區，有害物質會滲透到地下水，進入食物鏈，破壞你的健康和福祉。